
Hard Top Sun Canopy and Weather Shield

Installation guide for Aspire Odin Scooter


Canopy code SCA668690 | **Bracket code** Odin SCA668670


What you'll need

1. 12mm spanner
2. 13mm spanner
3. 10mm T-head socket spanner
4. Pneumatic or electric drill
5. 10mm drill bit
6. Phillips screw driver

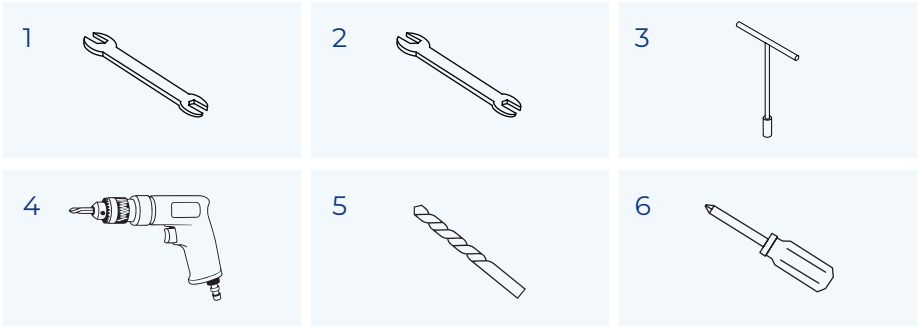

What's included

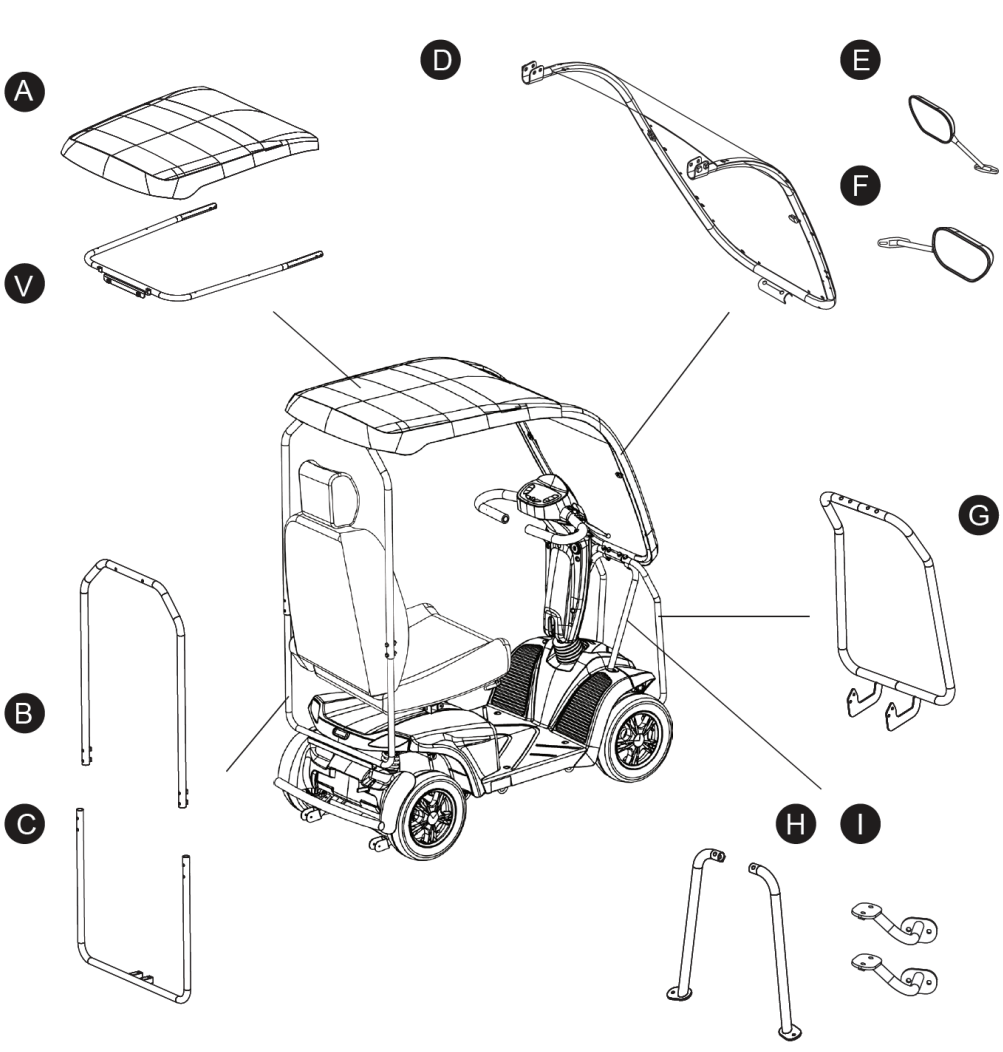

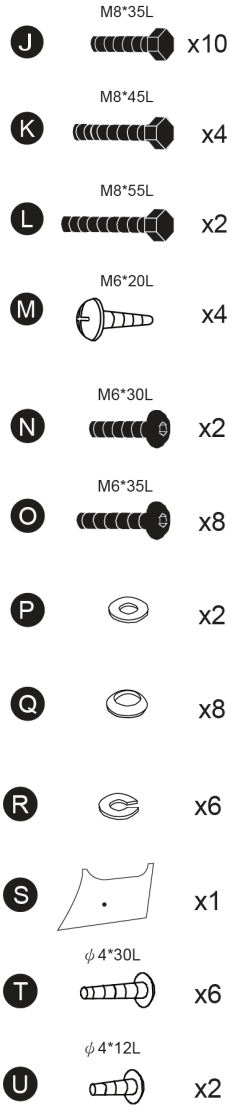


NB *All images are for illustration only.*

Installation Steps

Hard Top Sun Canopy | Aspire Odin Scooter


Follow steps below in order when selecting what to fix to the scooter.

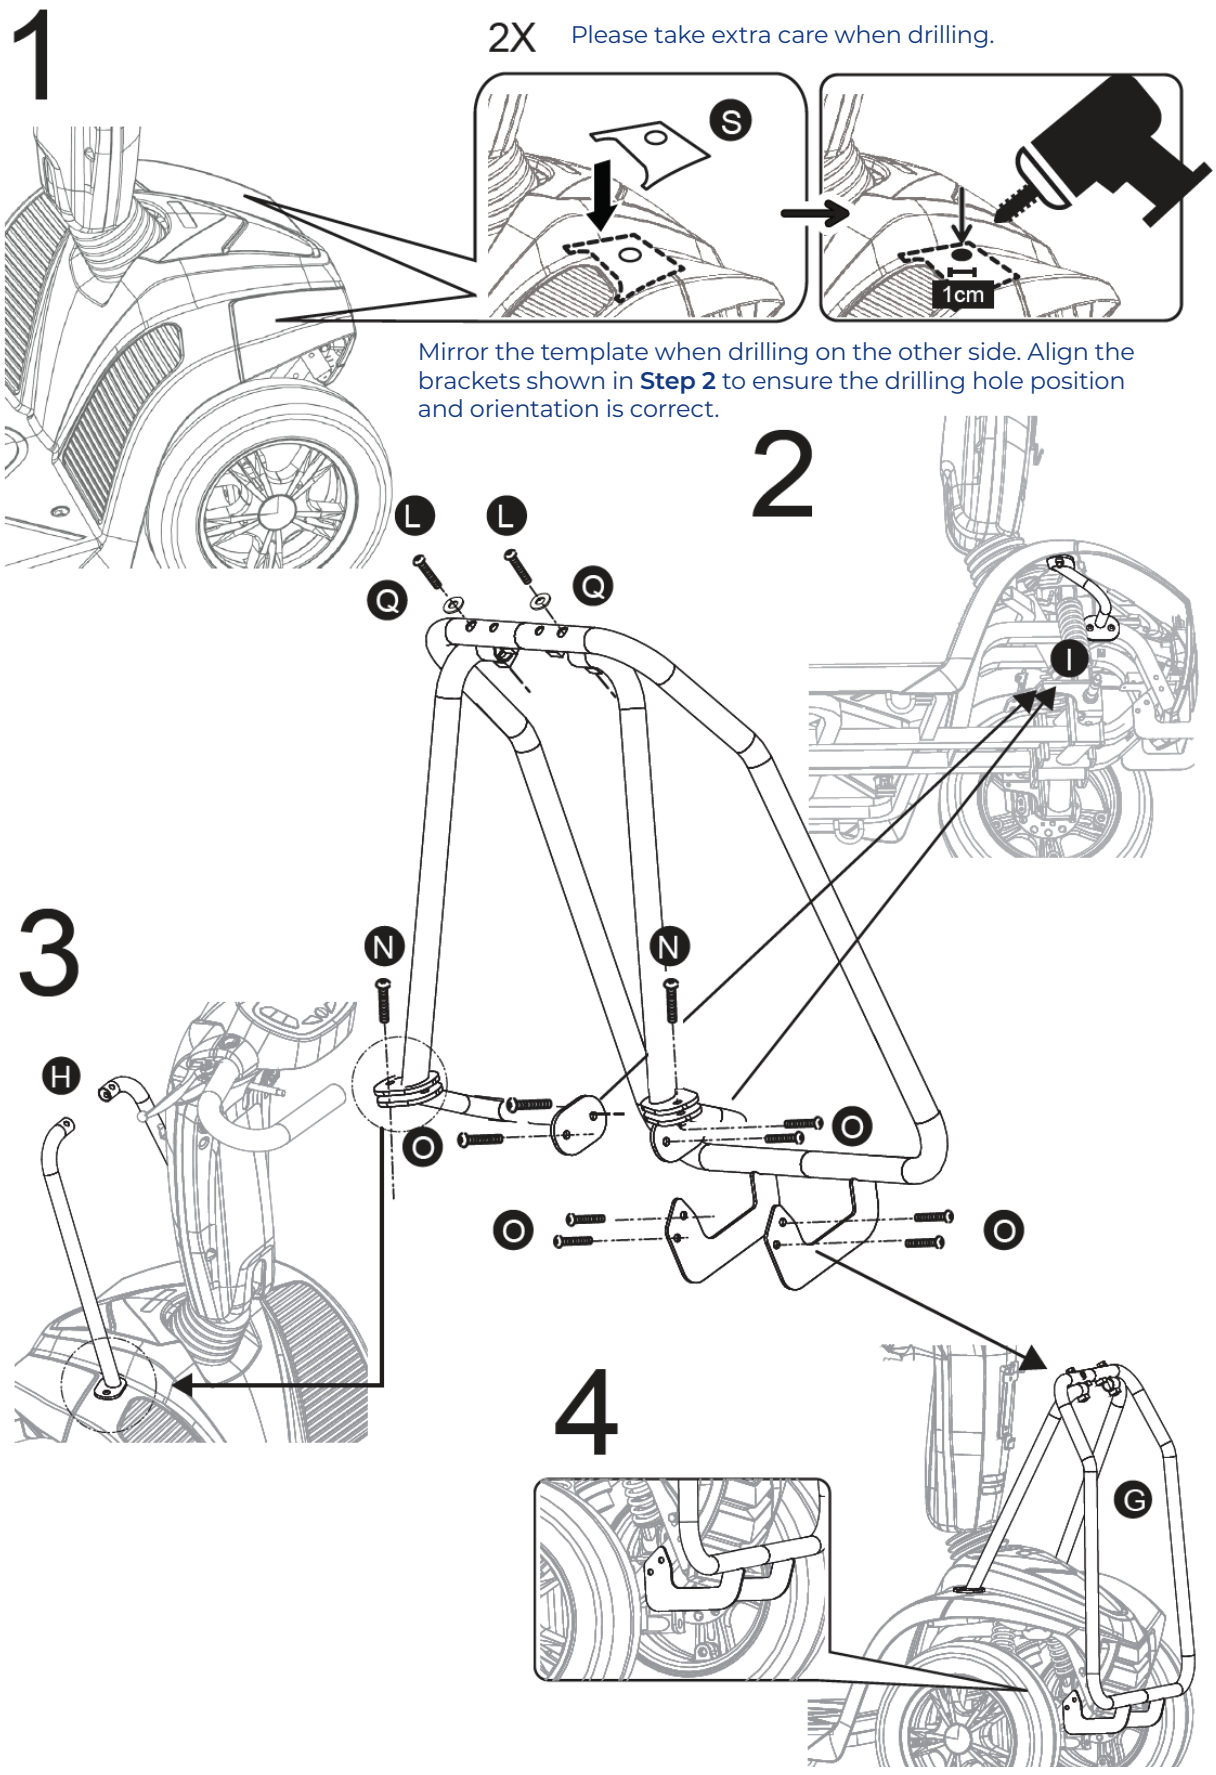

Installation Steps

Hard Top Sun Canopy | Aspire Odin Scooter


Follow steps below in order when selecting what to fix to the scooter.

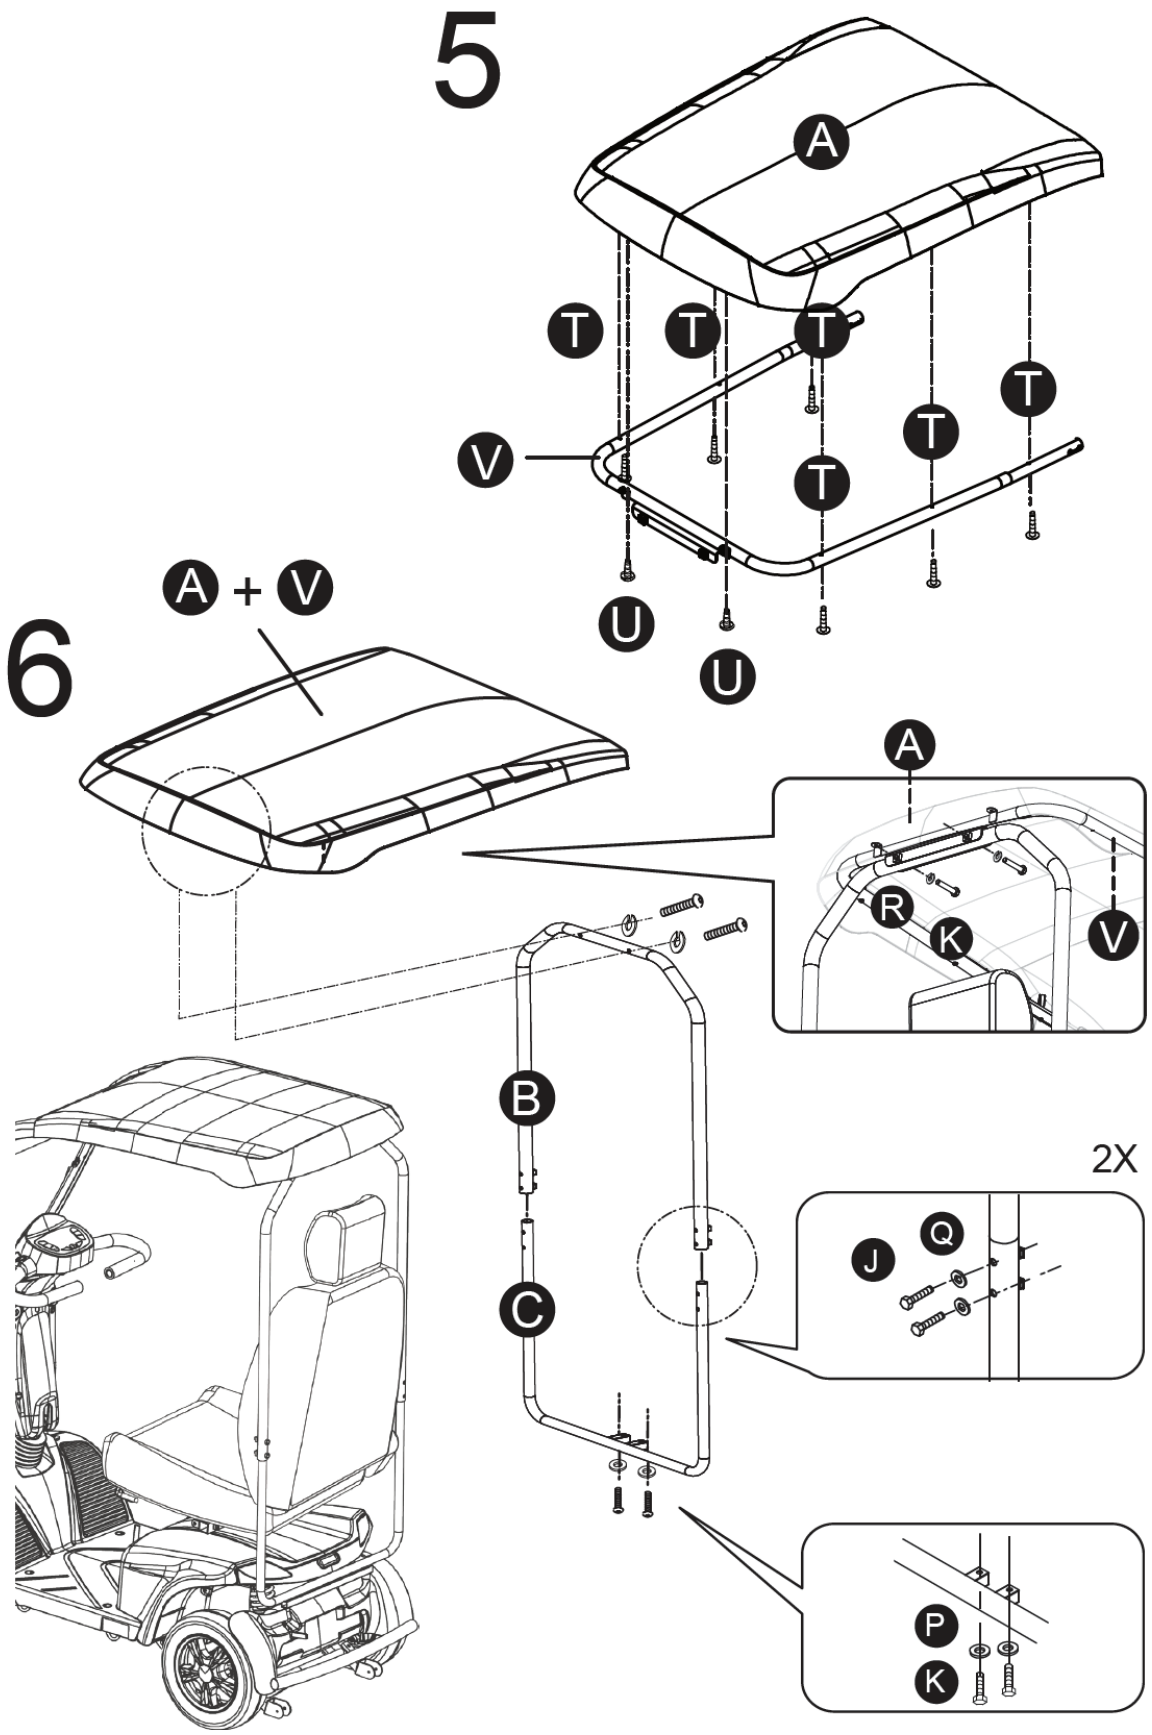

Installation Steps

Hard Top Sun Canopy | Aspire Odin Scooter

Follow steps below in order when selecting what to fix to the scooter.

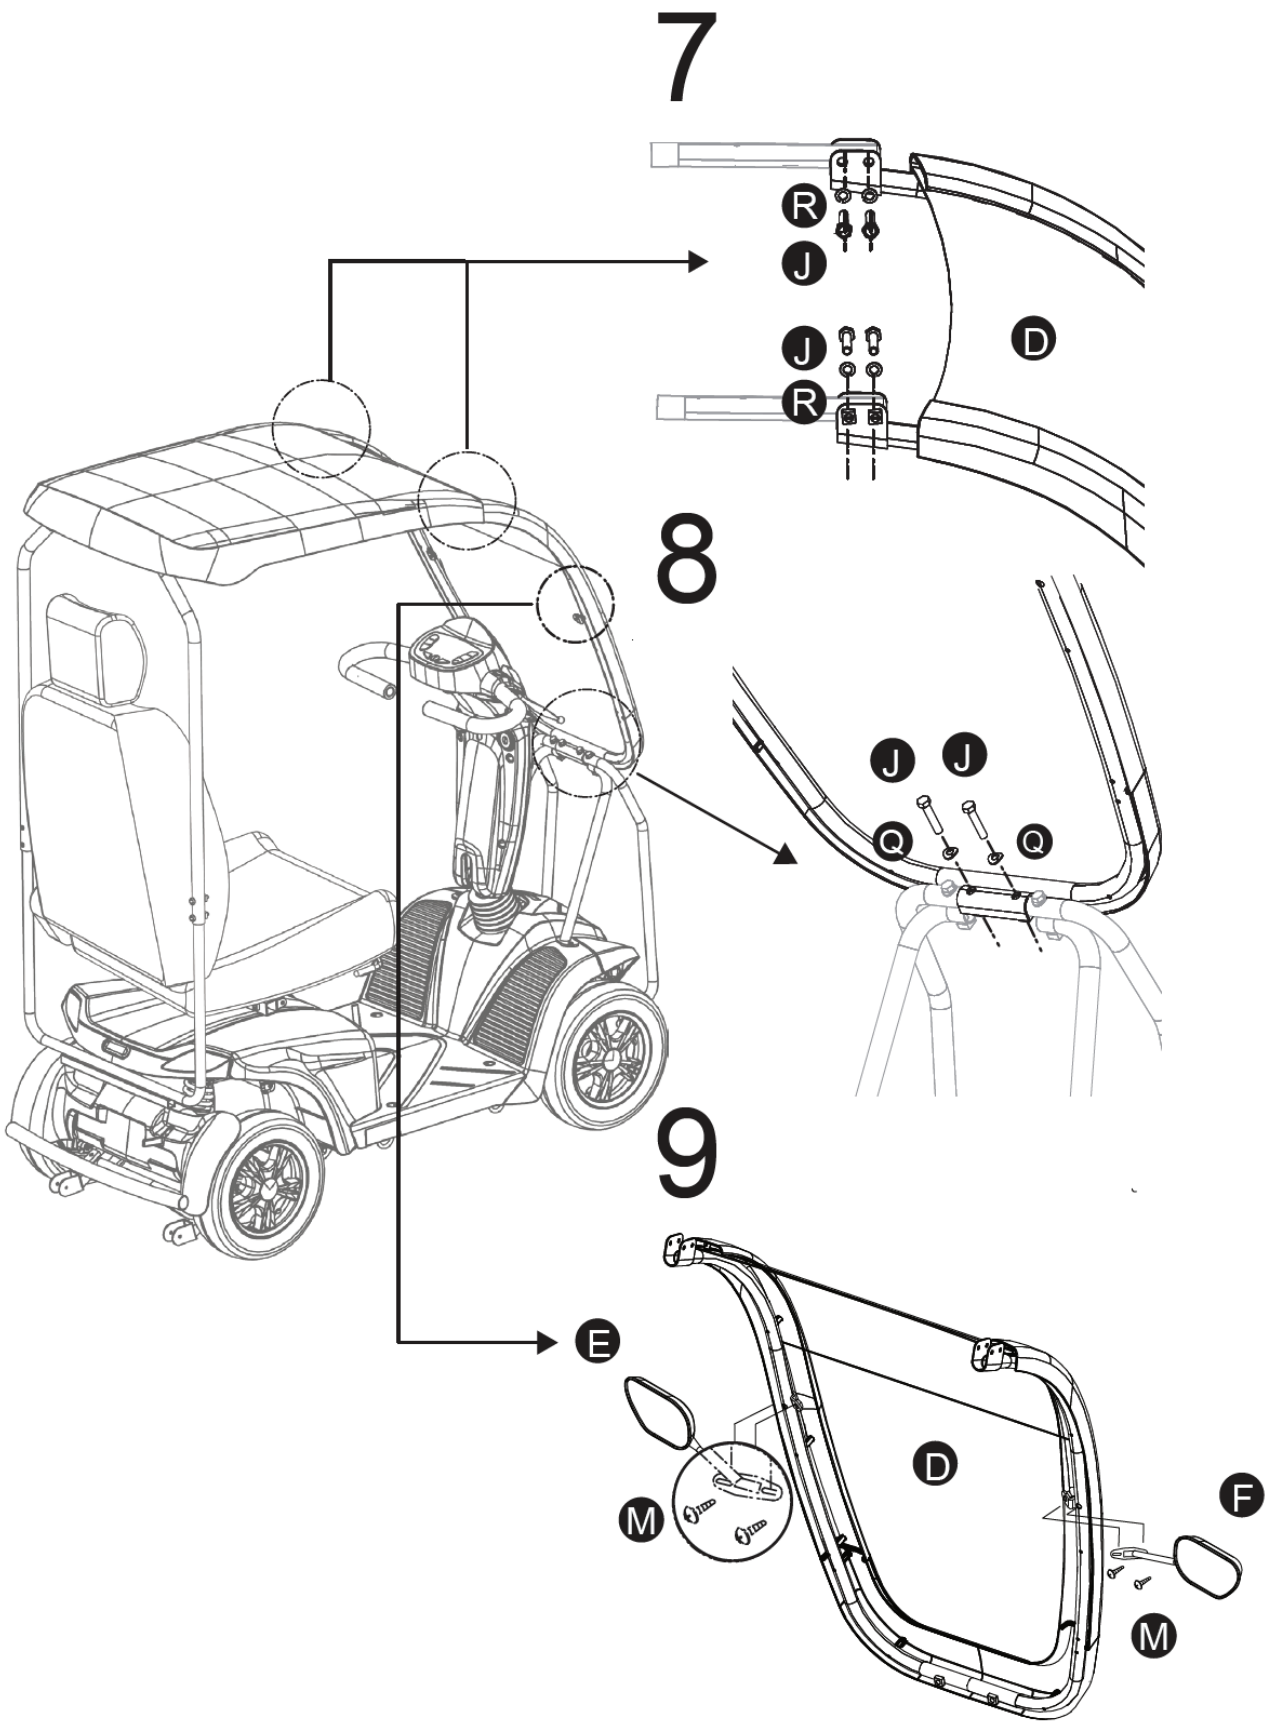

Installation Steps

Weather Shield | Aspire Odin Scooter

Follow steps below in order when selecting what to fix to the scooter.

